


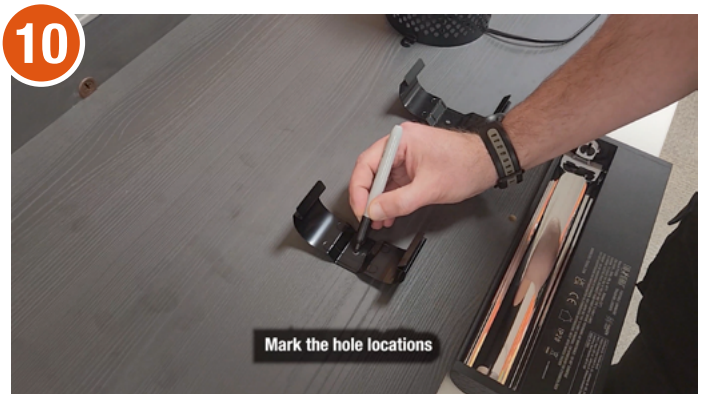
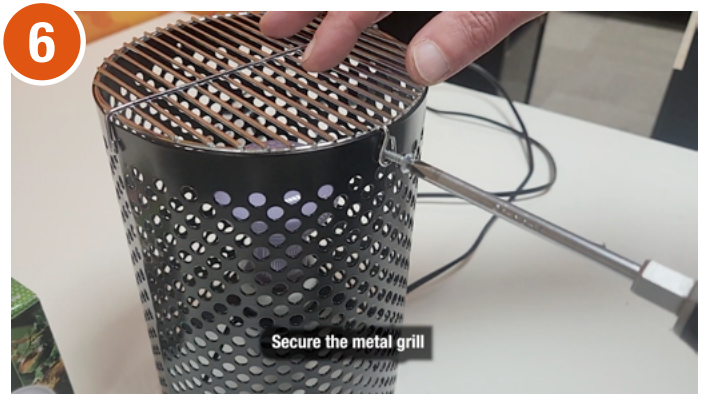
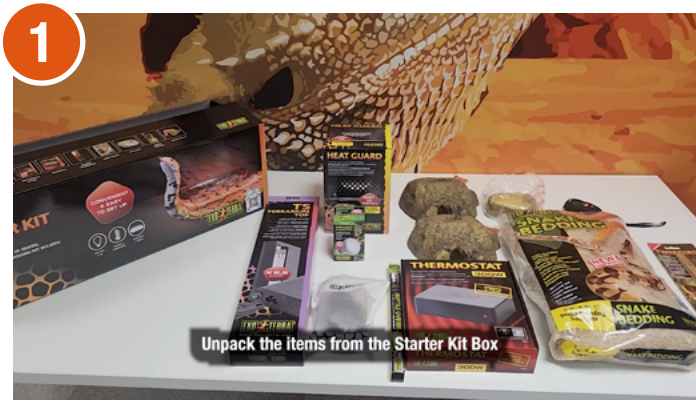
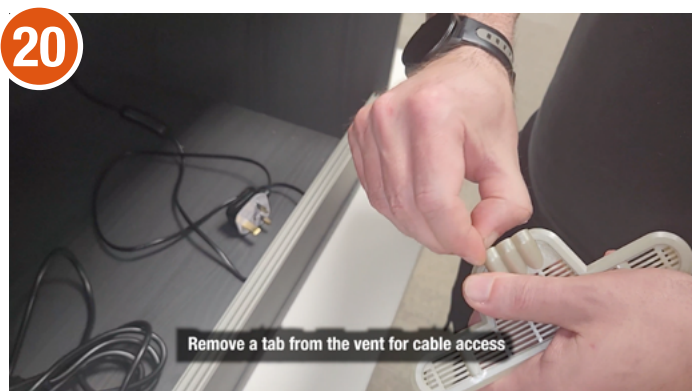


Snake Starter Kit Set Up Guide

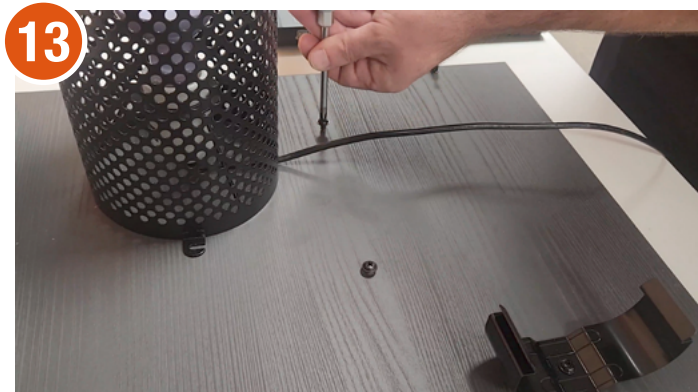

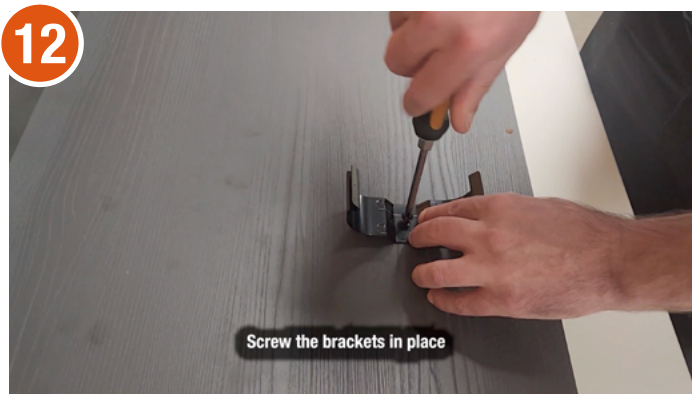


21

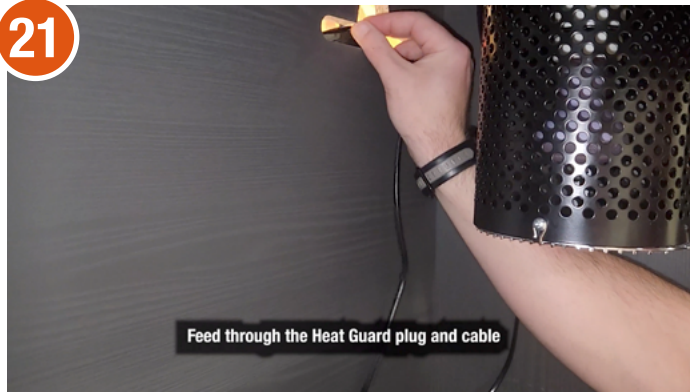

Feed through the Heat Guard plug and cable

22

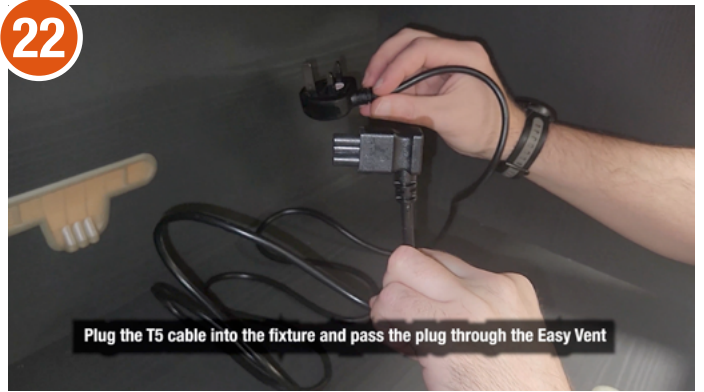


Plug the T5 cable into the fixture and pass the plug through the Easy Vent

23



Now we can install the Thermostat

24

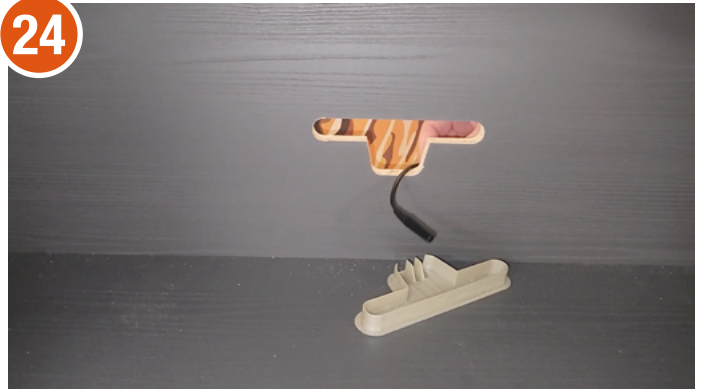

25



Plug the Heat Guard into the Thermostat Socket

26



Plug the T5 Fixture into the power source

27




Switch on T5 unit

28




Remove an Easy Vent tab

29

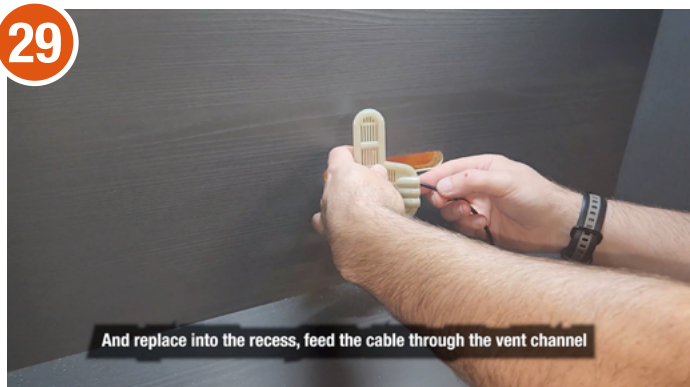

And replace into the recess, feed the cable through the vent channel

30

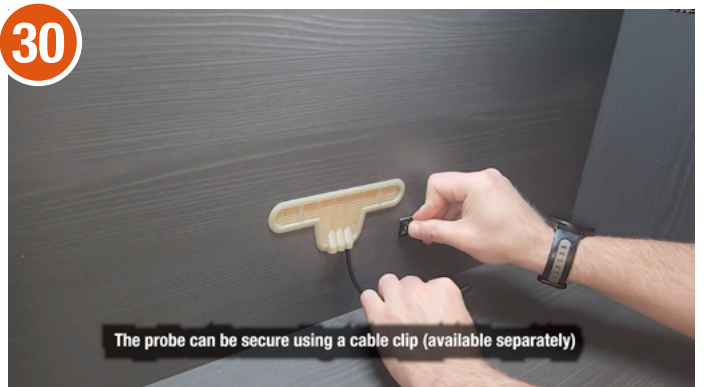

The probe can be secure using a cable clip (available separately)

